

Fireplace won't start with the remote control?

Reset your Intellifire Control Module



Symptom: Press the ON button on the remote control, unit beeps, but fire does not light

1. Find the control module underneath the fireplace (front may have to be removed)
2. Indicator light blinks between red and green
3. Find the Control Settings Tab. Tab should be in the REMOTE position (far Right position)
4. Move tab to the OFF position (Middle position)
5. Wait 2 minutes
6. Move tab back to the REMOTE position (far Right position)
7. Wait a few seconds, unit will beep
8. Fireplace is ready to turn ON

Indicator Light:
FLASHING

Control Settings:

Left: ON

Middle: OFF

Right: REMOTE

Unit still won't turn on?

Call us!

FIREPLACES



HEATING AND AIR CONDITIONING
319-338-3637
www.brandtheating.com